Unplug the saw
Use globes to handle the blades

(do not use globes when cutting wood!)



check how the blade goes through the guides

here and here (under the table top)



You will need to put the new blade exactly in the same place.

Touch the blade and test the tension. You will need to leave a similar one.



Open both doors (top first)



1-release the handle 2-release this if needed

3- remove the remaining tension of the blade with this one



Take out the old blade through the slit on the table top.

Put in the new blade through the slit on the table.


(be sure you set the teeth pointing down)

Place the new blades in the guides (top and bottom, see step 2)
It is easier if the guard is down.



Place the new blade on the wheels.

Try to leave the blade centered in the wheels:

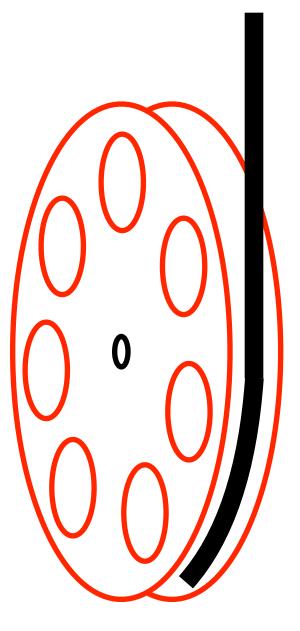



Add a bit of tension (not full)



Turn the wheels by hand a couple of times and check if the blade stays centered on the wheels.

If not, adjust the angle of the top wheel with this knob



when blade stay centered, add more tension with knob and handle and try.

Stop immediately if you see sparks or hear strange noises...